



EVOTECH®
P E R F O R M A N C E

KTM 1290 Super Duke R


Crash Protection


Installation Instructions




Kit Contents PRN014848

- (A) 1 x RH Bobbin Bracket
- (B) 1 x LH Bobbin Bracket
- (C) 2 x M12 x 110 Caphead
- (D) 2 x Bobbin Spacer
- (E) 2 x Poly Washer
- (F) 2 x M12 Washer
- (G) 2 x Bobbin Head
- (H) 4 x M10 x 80 Caphead
- (I) 4 x Frame Spacer

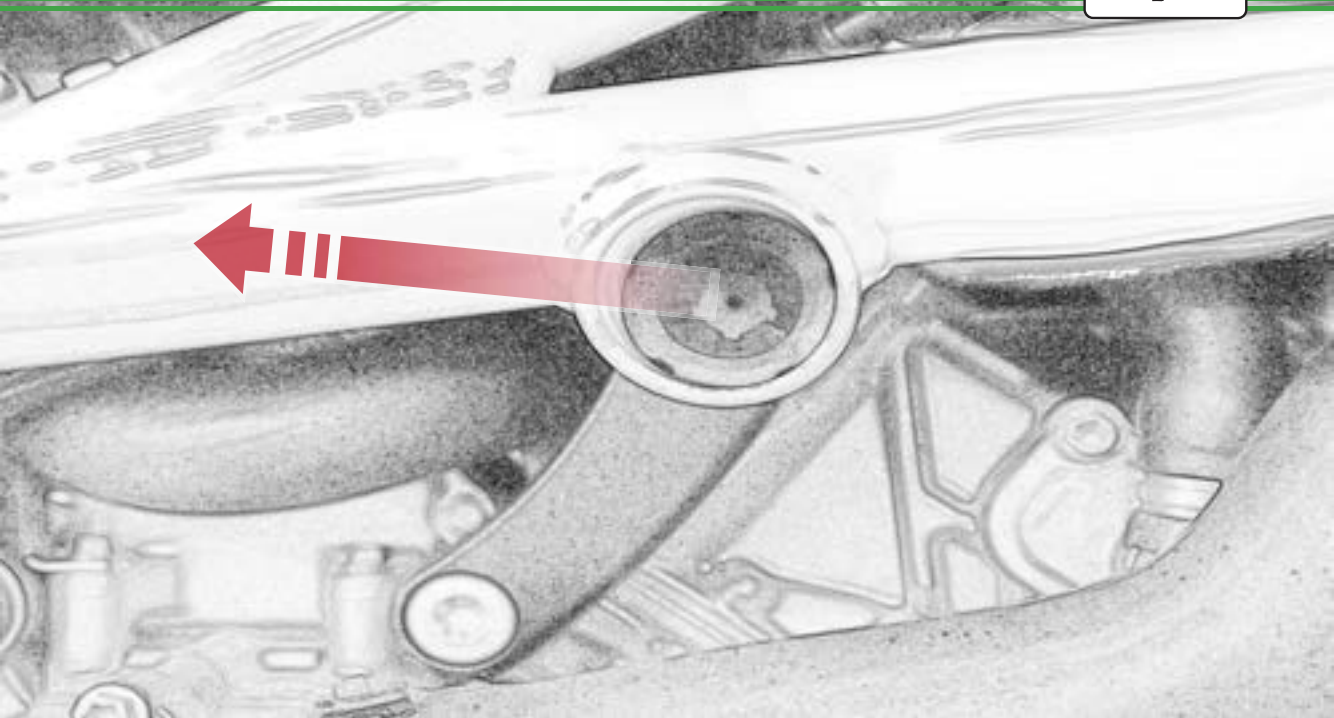


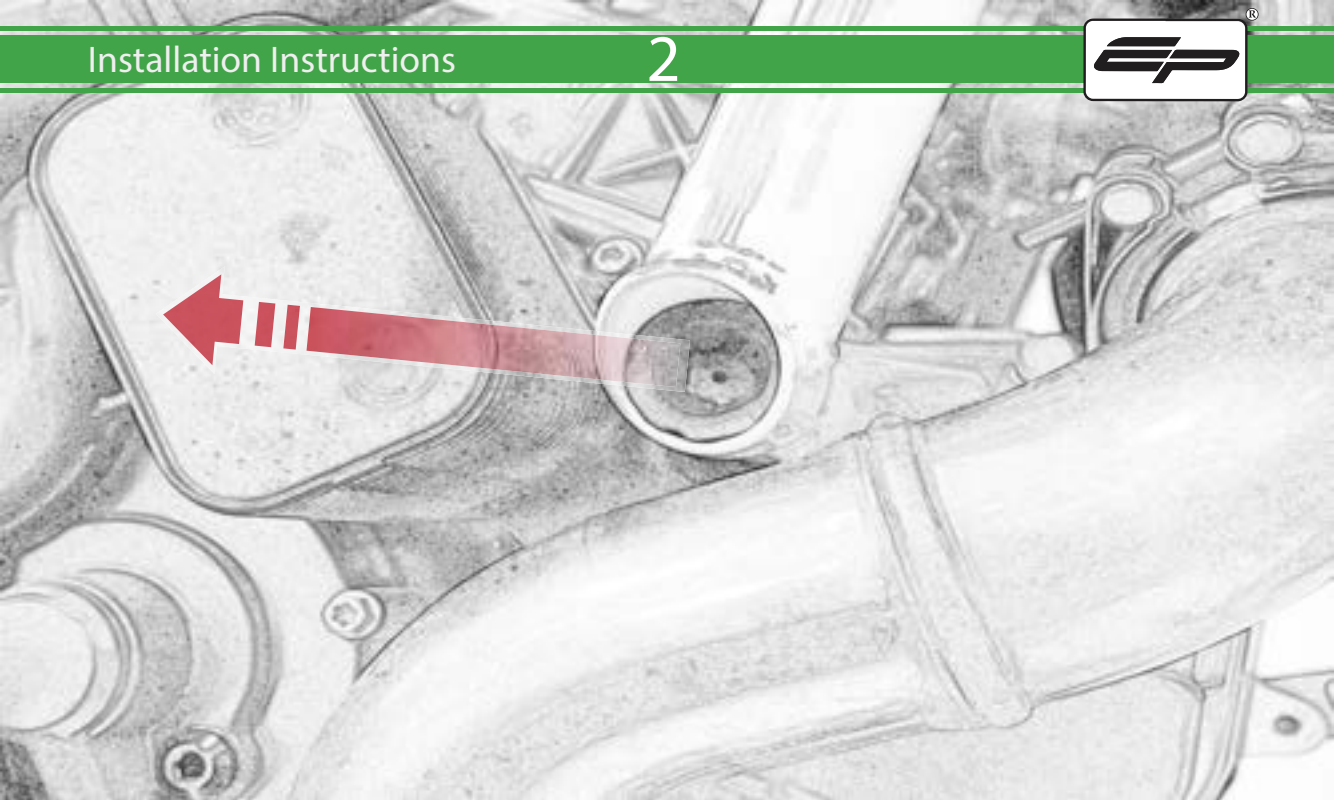





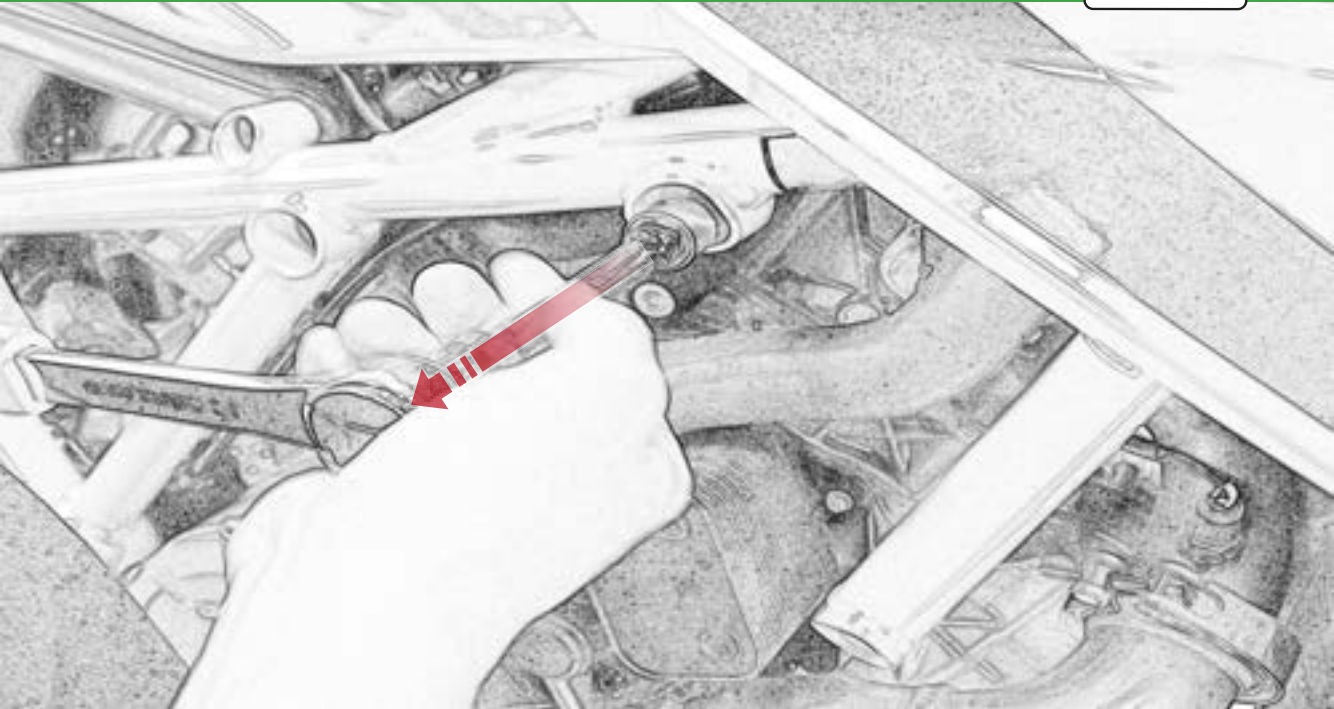





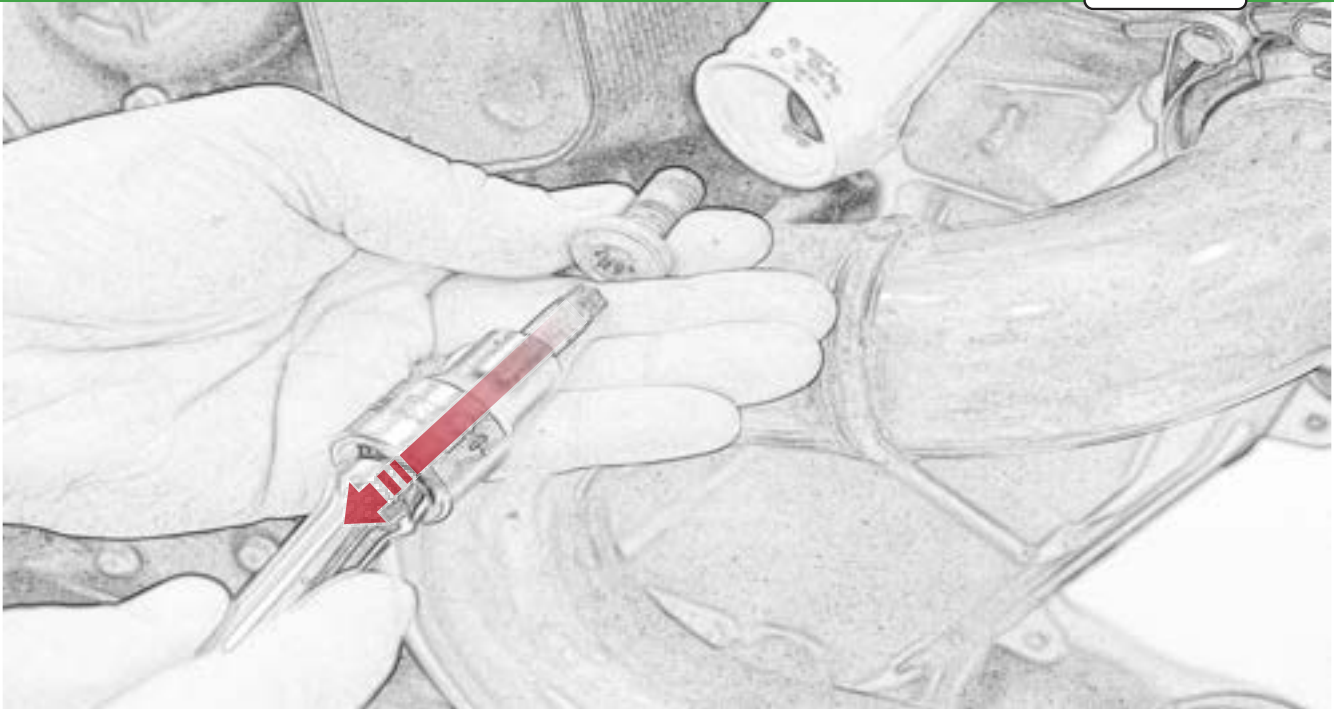

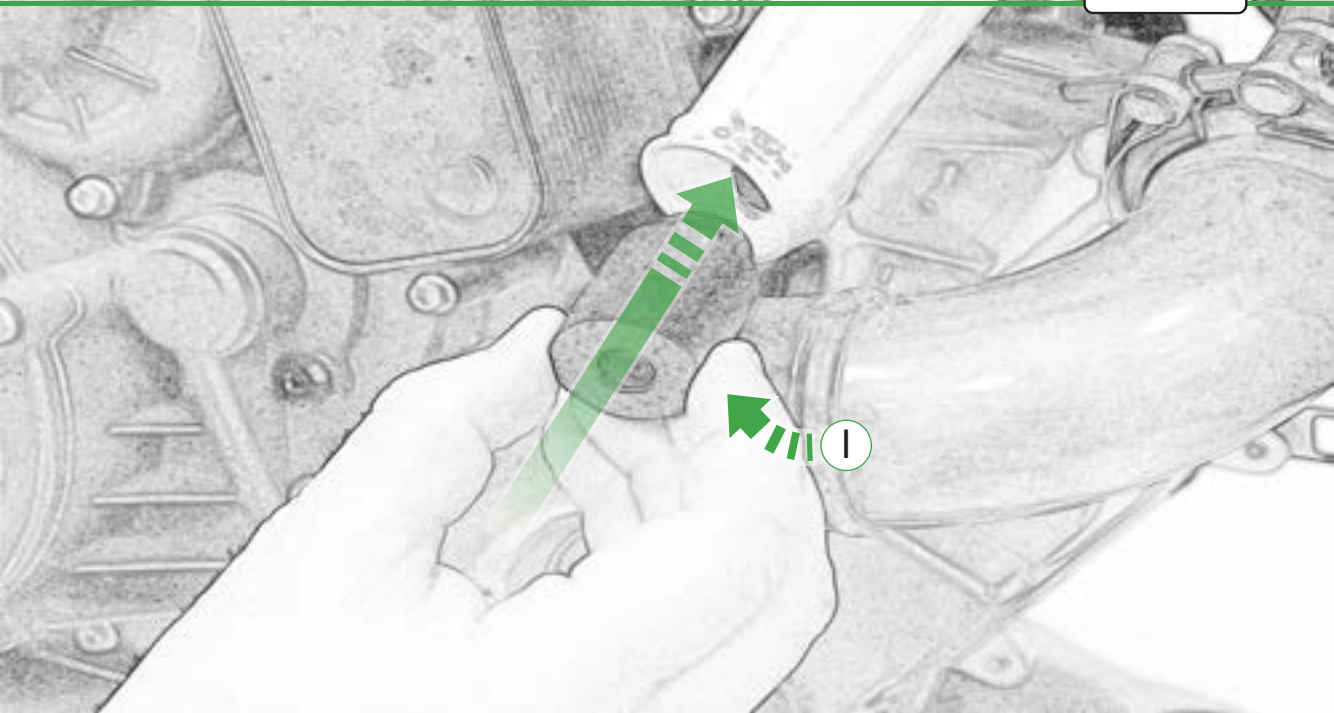

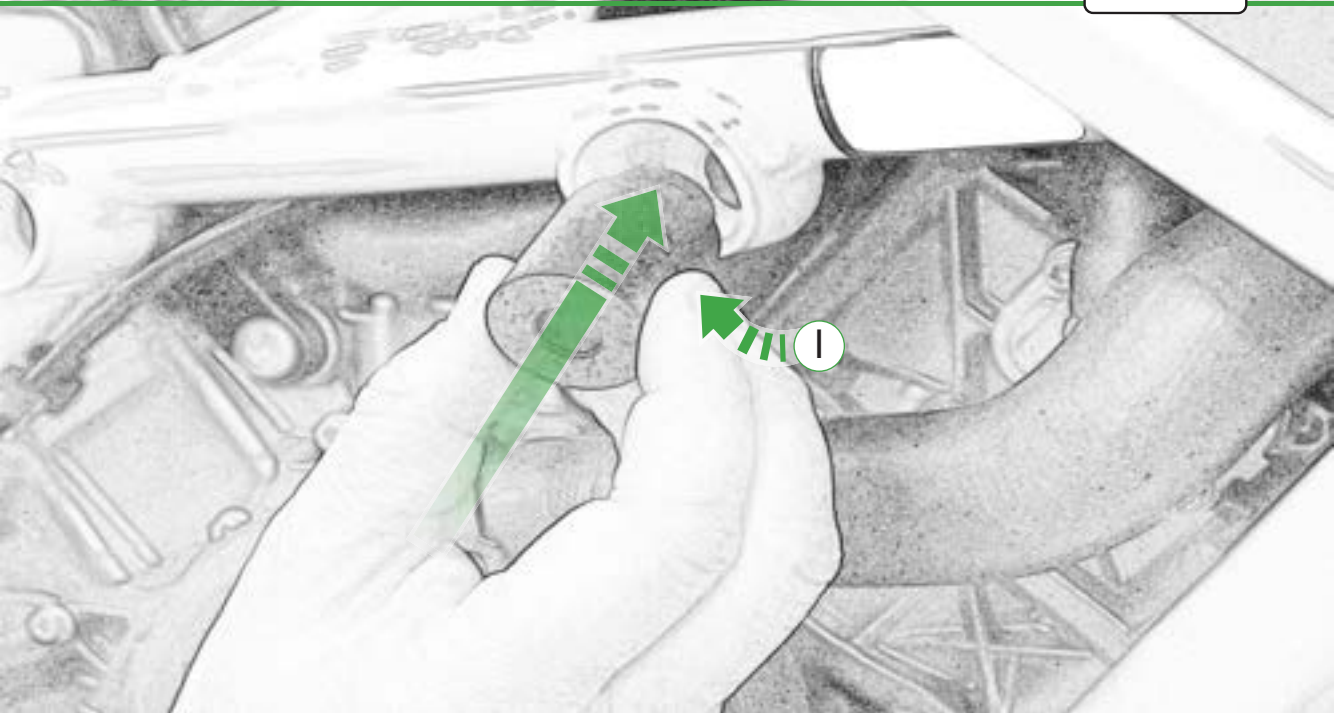


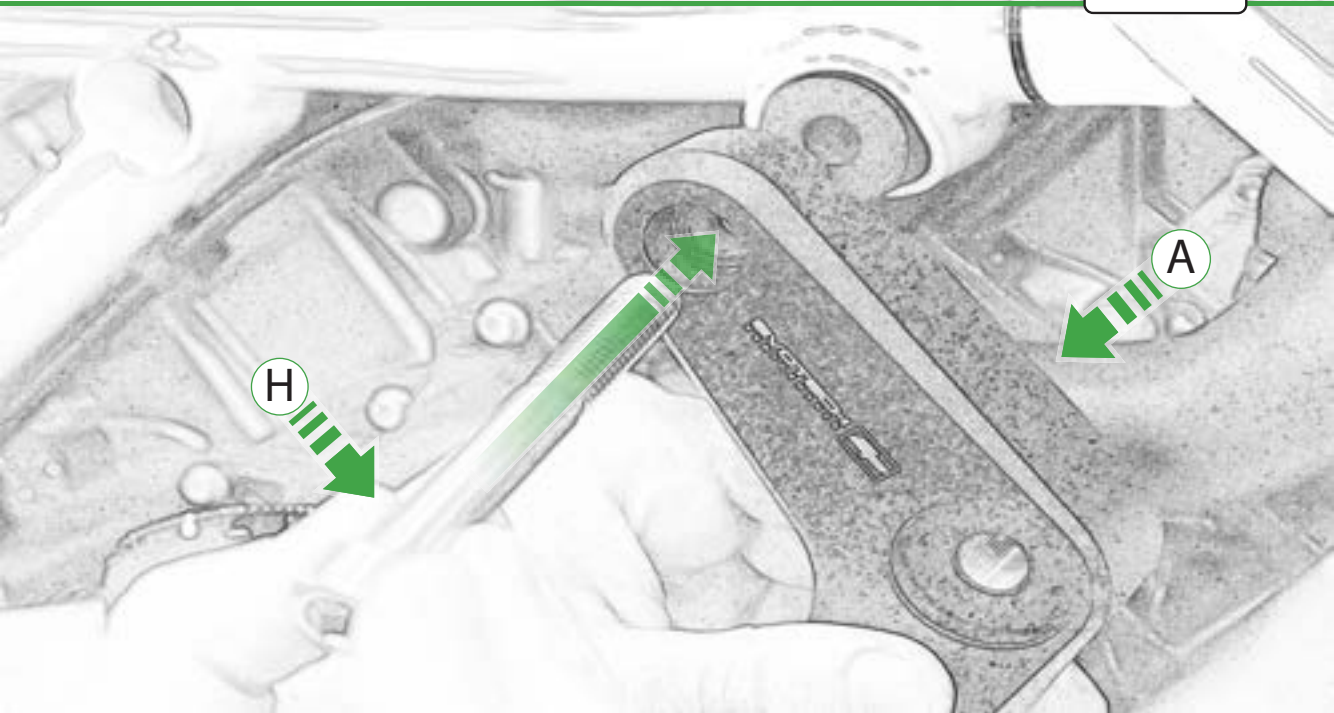

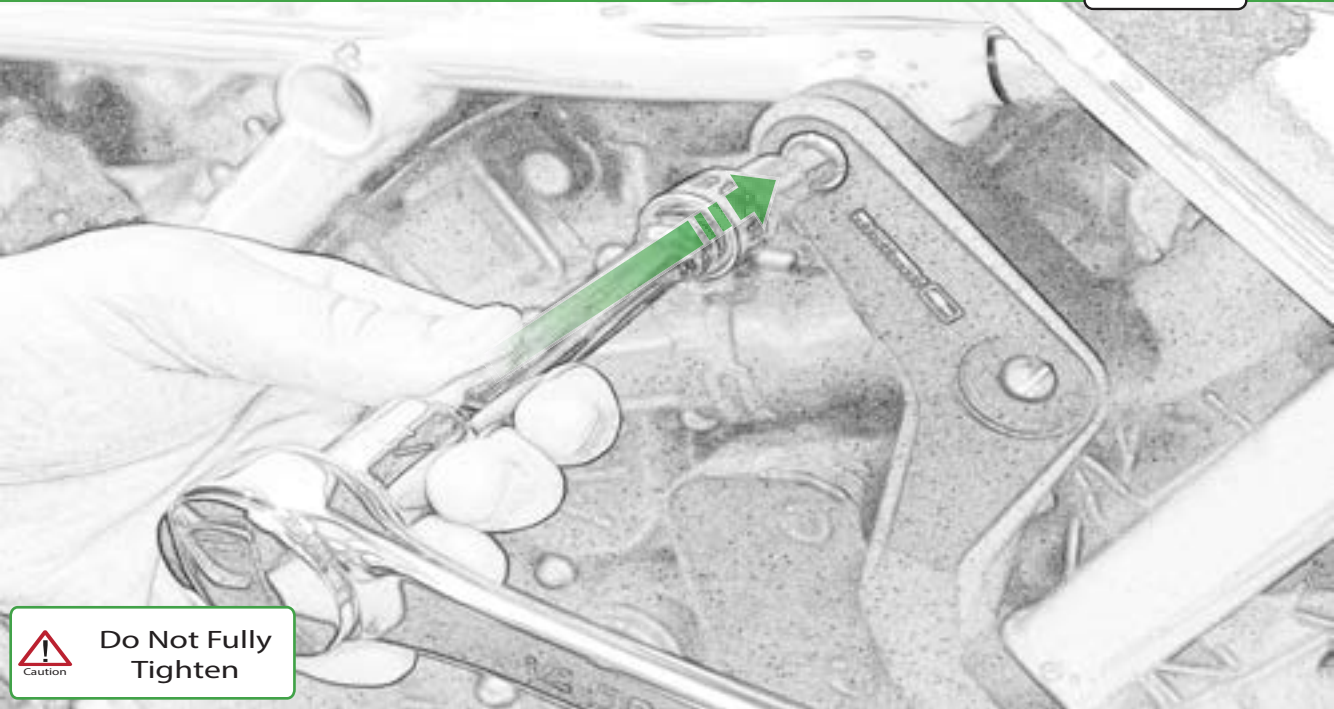


Caution

Do Not Fully
Tighten

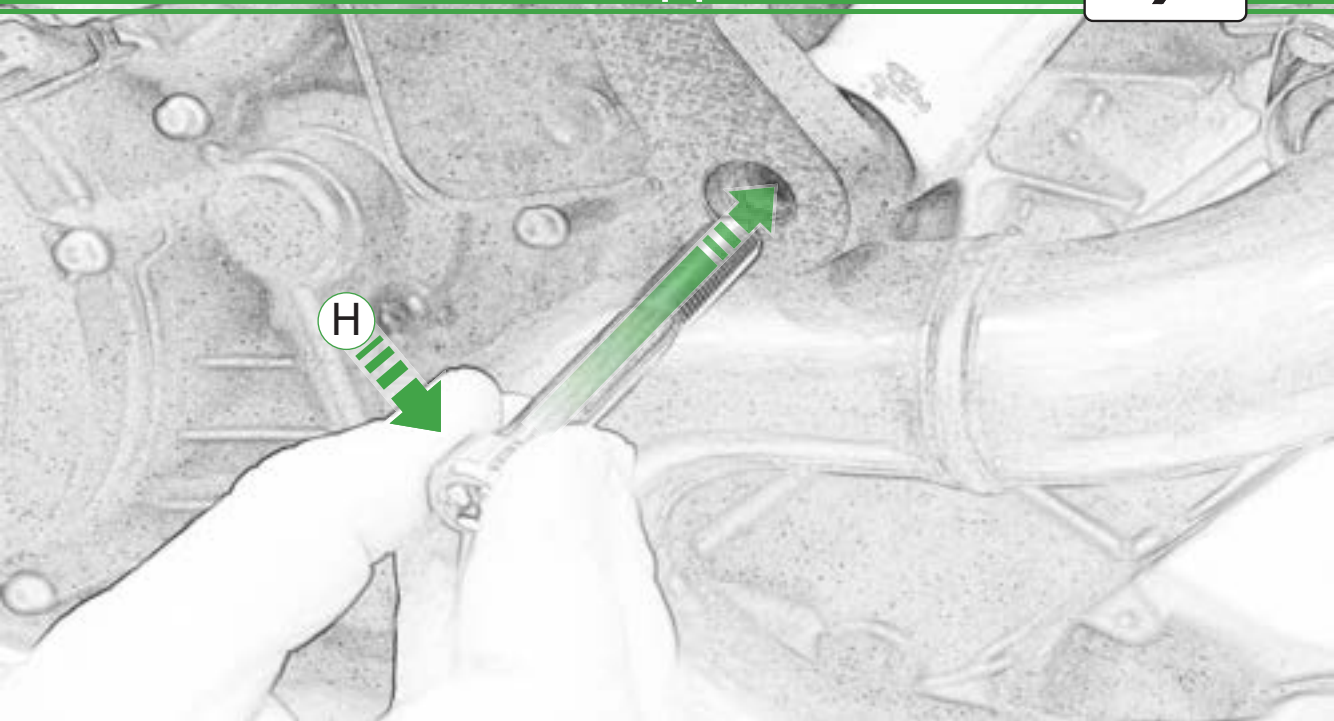




Do Not Fully
Tighten

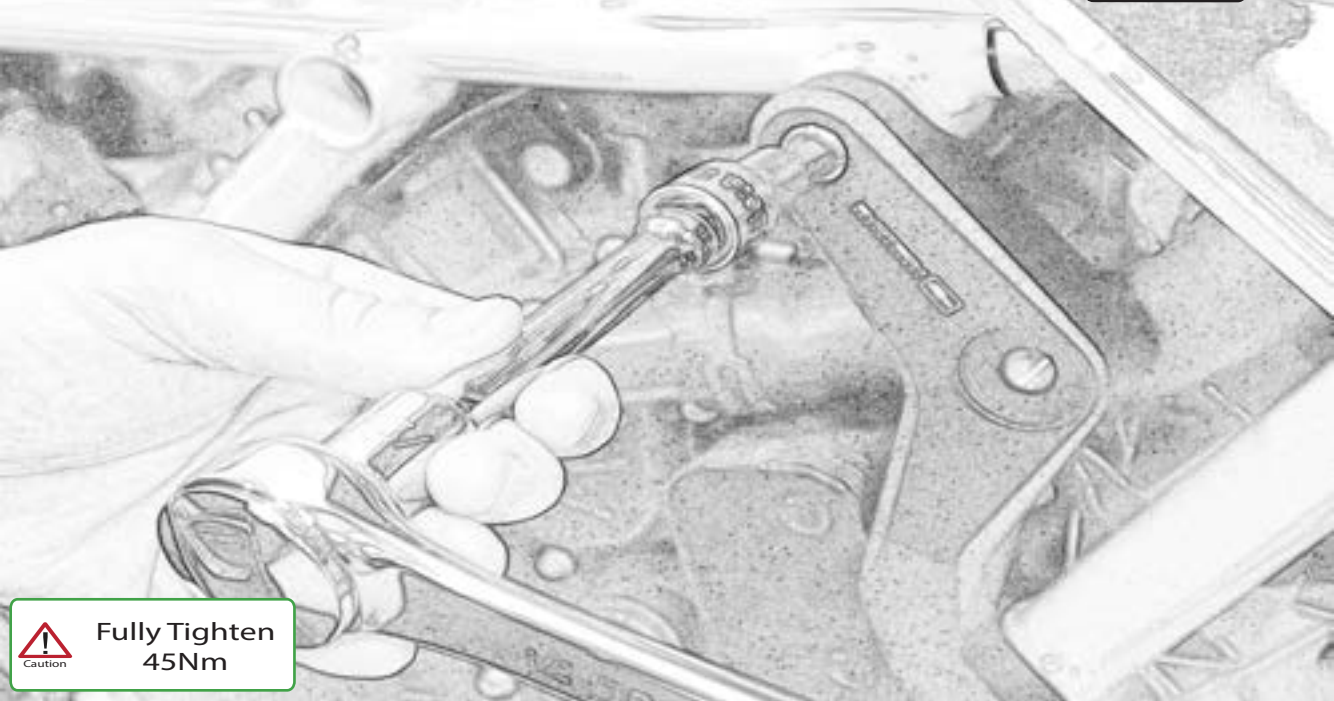


Fully Tighten
45Nm





Fully Tighten
45Nm

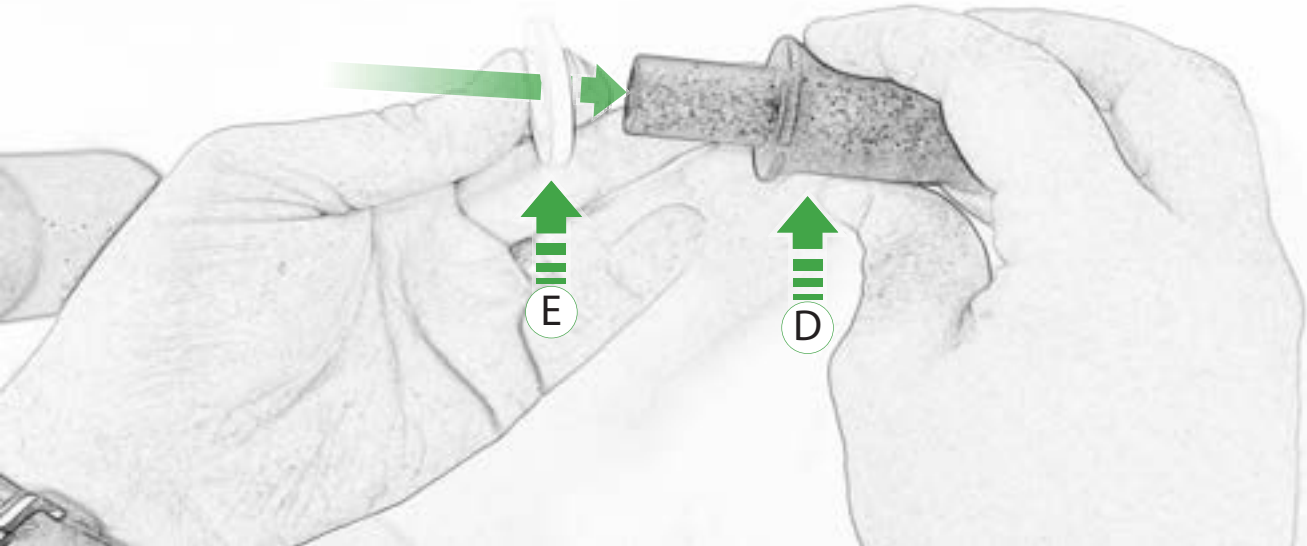


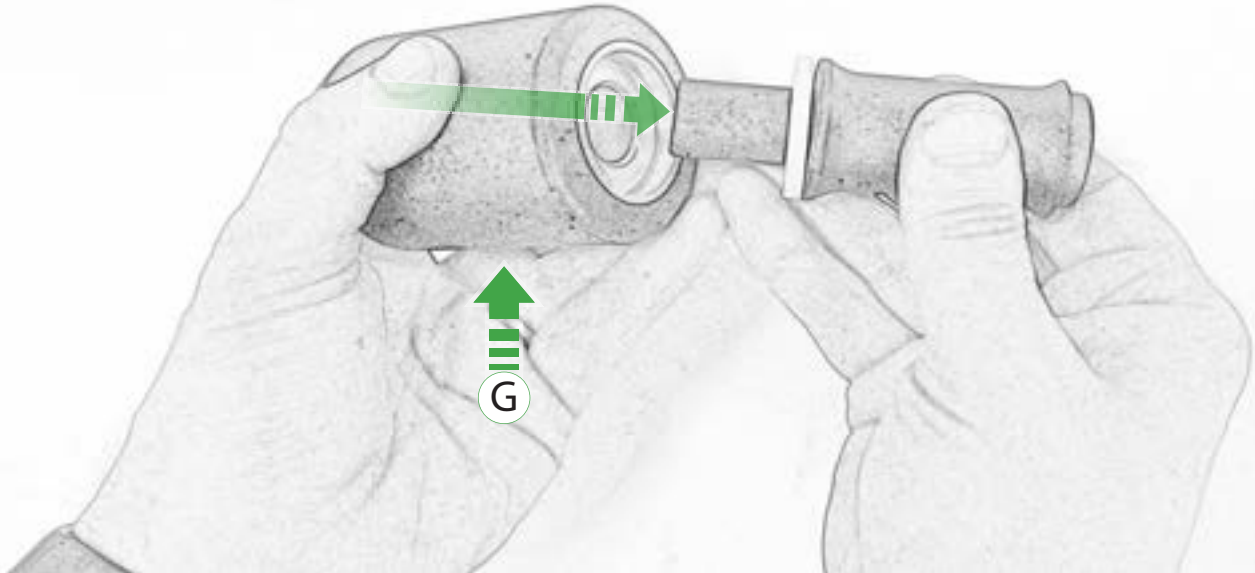



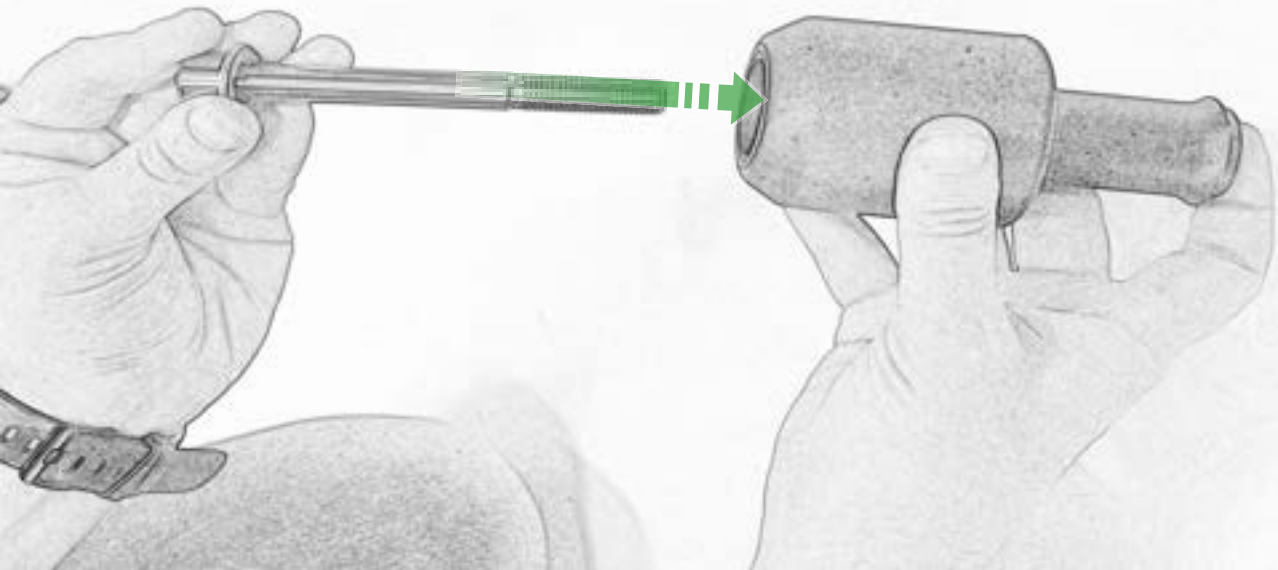


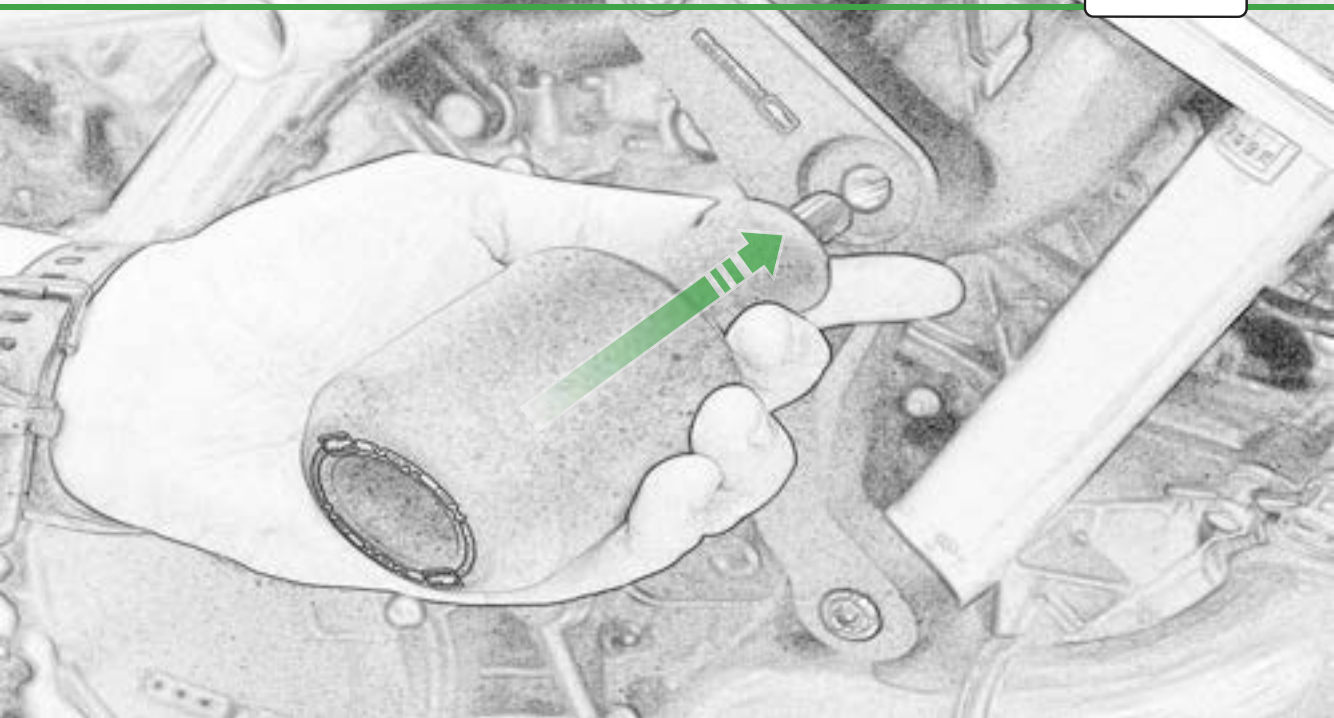

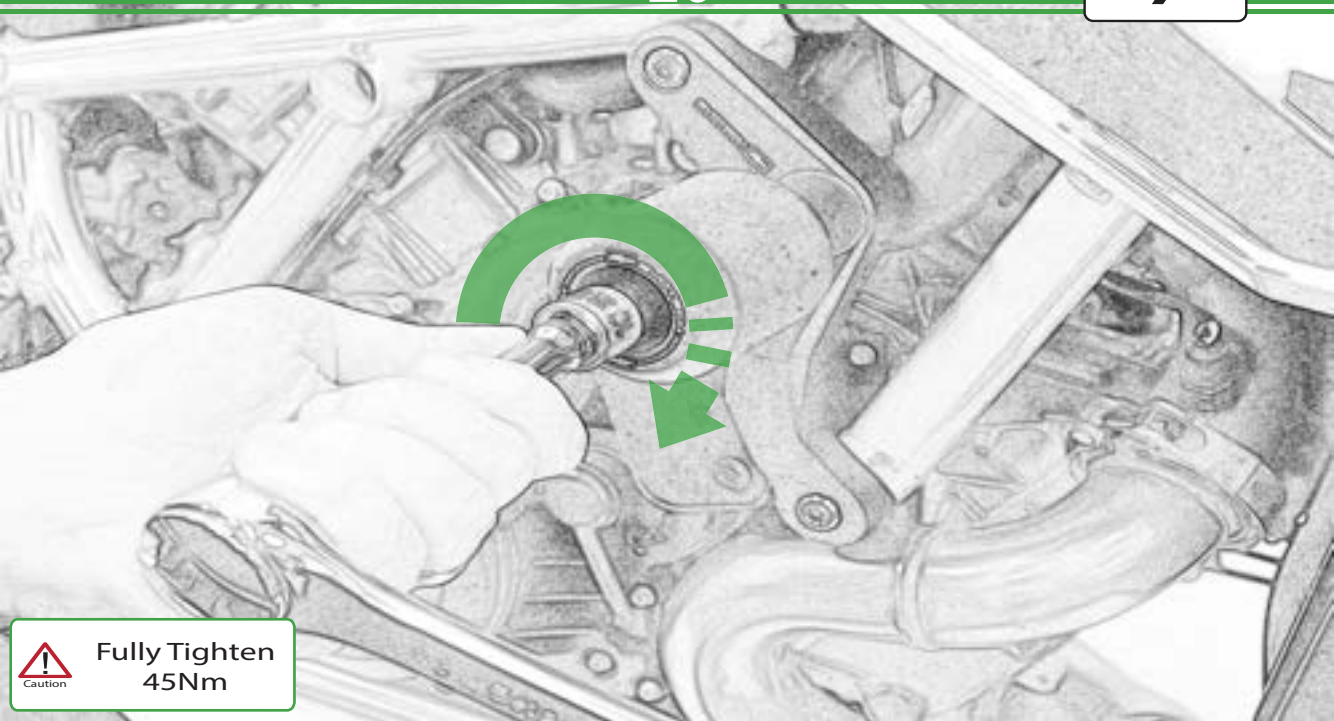

Caution

Fully Tighten
45Nm

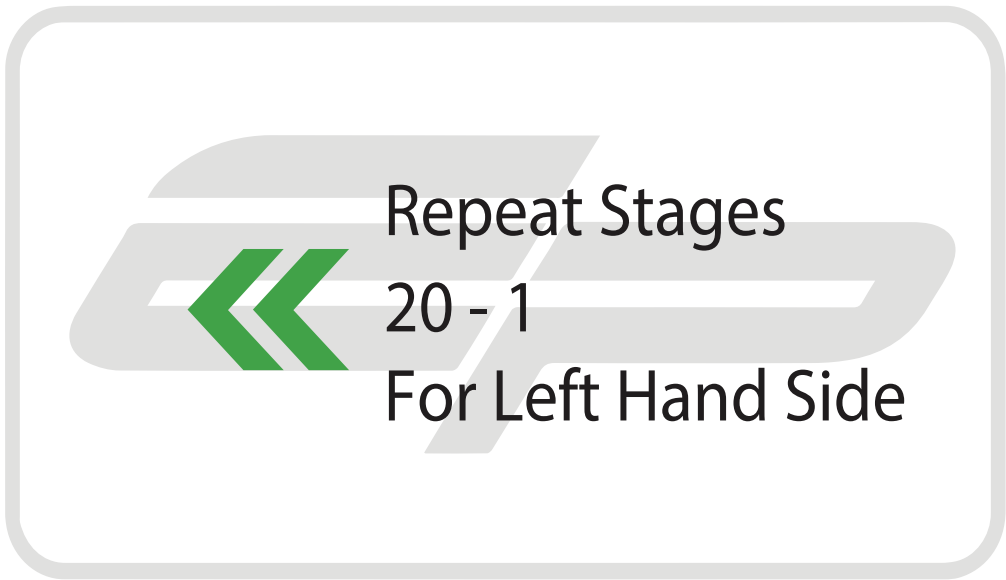



ESSENTIAL CHECKS

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



EVOTECH®
P E R F O R M A N C E

www.evotech-performance.com